

# Index

Abort Softkey	5-14	Constructed Features	
Absolute softkey (Scribe Mode)	7-4	Constructed Circle	5-21,1-11,1-12
Acceleration - Max (DCC)		Constructed Line	1-11,5-22
See "Max Acceleration"		Constructed Plane	5-21
Accuracy Troubleshooting	A9-1	Constructed Point	5-22
Add Record (Statistics)	5-25	See "Symmetry Point"	
Air Locks	2-7	Construction	
Air Saver	2-4,10-6,A4-1	See "Constructed Features"	
Aligning a part	4-4	Contrast	10-7
Alignments	1-7,4-3,4-4,4-5	Controller	
Line Line Intersect Alignment	4-3	See "Installing a ..."	
Circle Origin Alignment	4-4	Controller Lockups	11-4
Alignments Tutorial	4-1	Controller Won't boot	11-4
Alignments (DCC Option)	10-20	Coordinate Measuring Machine	1-3,1-4
Angles	10-6	Coordinate Systems	1-5,1-6,1-7
Arcs	3-13	part coordinate system	1-6,1-7
Arm Speaker Volume	10-5	machine coordinate system	1-5,1-7
AutoTune	A7-2	Copy Mean (Statistics)	5-25
Axes (See "Machine Axes")		Copyright Screen	2-4
Ball Probe	5-4	Counter Mode	7-1,10-18
Baud Rate	10-16	Create Work Instruction	
Bolt hole pattern		See "Work Instruction"	
See "Constructed Circle"		Cycle Option softkey	2-8
Booting controller		Cylinder	
See "Controller Won't Boot"		See "Measuring A...."	
Cable		Cylinder Threshold	
See "Null Modem Cable"		See "Minimum Cylinder Depth"	
Can Not Solve Error	2-12	DataPage	5-25,A4-1
Cards		DataPage (serial output)	10-12
See "Smart Cards"		Datum	5-20,1-7,1-8
Change Feature Type	5-9,3-13	Datum A (See "Set Level")	
Change Option softkey		Datum B (See "Set Axes")	
See "Cycle Option Softkey"		Datum C (See "Set Origin")	
Circle		Datum Status	5-6
See "Measuring A ...."		Decimal Places	
Clearance Points	12-5, 12-3	See "Trailing Places"	
Clearance Speed	10-20	Delete Block	5-13,5-33
CMM (See "Coordinate Measuring Machine")		Delete Program	5-31
Computer		Delete Record (Statistics)	5-25
See "Connecting to a Host... "		Delimiter	10-6
Cone		Demo Block	3-5,3-4,A3-1,A4-1
See "Measuring A...."		Demonstration Mode	12-6
Cone Angle	10-10	Dial Indicator Mode	6-1,10-17
Connecting to a Host Computer	A6-1	Digitize Mode	9-1,10-18
Construct from Datum	5-23	See also "RefleX Scan"	

# Index

Digitize Outline	5-26	Tolerance Softkeys	8-9
Digitize Serial Output	9-4	Help Button	8-10
Disk Probe Qualification	2-12	Histogram (Statistics)	5-25
Done softkey	2-5	Homing the Machine (Home Screen)	2-7
Drawing		HyperTerminal	A6-1
See "Part Drawing"		Icons	
Editing Sequences (Programs)	5-33	See "Softkeys"	
Effective Probe Techniques	1-18,1-19,1-20	Inches	
Email Address	2-4	See "Units"	
Enabling Statistics	5-25	Incremental Softkey (Scribe Mode)	7-4
Encoders	A7-2,A7-3,A7-4	Inserting a probe	2-10
Execute Block		Installing a Replacement Controller	A7-1
See "Playback"		Introduction to Coordinate Metrology	1-1
FAQs		ISO tolerancing	5-14
See "Frequently Asked Questions"		Jogbox	12-3
Feature Construction		Jump to below alignment	
See "Constructed Features"		See "Loop to below alignment"	
Feature Labeling	5-35	Keyboard	10-13
Feature List	5-5,5-7	Keyin Values softkey	5-19
Fixtures	12-6,10-20,5-29	Languages, Language Screen	2-5,10-5
Flatness	6-4	Leap Frog	5-35
Formatting (Storage Card)	5-32	Line	
Frequently Asked Questions	11-3	See "Measuring A..."	
Flying Probe	10-4	Lissajous Plot	A7-4
Force Feature Type		List Programs	5-32
See "Change Feature Type"		Loading software	2-4
Frown face Icon	2-4, 11-4	Locating the Qualification Sphere	2-9
Gage Talker (serial output)	10-12	Lockups	
Generic Format (serial output)	10-12	See "Controller Lockups"	
GD&T Symbols	5-16	Loop to below alignment	12-6,5-29
Hard Probe Scanning Screen		Lower Menu Softkey	5-8,3-8,3-9
See "Scanning Screen"		Machine axes	1-5
Hardware		Machine coordinate system	1-5,1-7
See "Optional Hardware"		Machine Serial Number	2-7,A7-1
Headers		Machine Type	2-7,10-4
See "Print Headers"		Max Acceleration (DCC)	10-20
Heidenhain Controllers	10-4	Measured Features	1-11
Height Gauge Mode		Measurement Mode	3-3,5-1,10-18
Measuring a bore	8-1,10-18	Measurement Results	A1-1
Measuring a point	8-5	Measuring Features Tutorial	3-1
Measuring a slot	8-4	Measuring	
Measuring in the....	8-5	A Circle	3-12,3-13
Overview	8-4	A Cone	3-19
Result Screens	8-3	A Cylinder	3-17,3-13
Softkeys	8-6,8-7,8-8	A Line	3-10

# Index

A Plane	3-15	Error Recovery	5-29
A Point	3-4	Execute Block	5-29
A Sphere	3-21,2-11	Executing a program	5-28
Measuring a sphere	2-11	Exiting Playback	5-29
Measuring Modes		Overview	5-27
See "Startup Options"		Planning an Inspection	5-28
Minimum Cylinder Depth	10-9,3-13	Playback Pause	10-13
Minimum Distance Option	5-35	Point	
Mitatoyo Serial Output	10-12	See "Measuring A..."	
Move Points		Points/Sec option	10-8
See "Clearance Points"		Porting Features	5-35
Moving a horizontal machine	5-33	Posthit distance	10-19
Moving Measured Blocks	5-33	Posthit speed	
Mux10		See "Pre/posthit speed"	
See "Mitatoyo Serial Output"		Power Supply	A7-4, 11-4
MM		Power Switch	2-3
See "Units"		Precision	
Mouse	10-16	See "Trailing Places"	
Nearest Nominal	5-15,3-18,10-9	Prehit distance	10-19
Next Item Softkey	5-14	Pre/posthit speed	10-20
Next Result softkey	5-14	Print Company	10-13
Next Tip softkey	5-19	Print Date	10-14
Null Modem Cable	9-3,A4-1,A5-1	Print Format	
Offset Plane		See "Printer Format"	
See "Constructed Features Plane"		Print Headers	5-33,10-13,10-14,10-15
Optical Probe	A4-2	Print Note	10-15
Optional Hardware	A4-1	Print Operator	10-13
Origin		Print PartName	10-14
See also "Set Origin"		Print Time	10-14
Other Machine Type	10-4	Print Top/Side/Front View	3-9
Output Status	5-7	Printer	
Parity (Serial)	10-16	See also "Send to Printer"	
Part alignment		Printer Format	10-15
See "Aligning a part"		Printer Picture & Part Number	A4-1
Part coordinate system		Printers supported	10-11
Part Drawing		Printing Results	5-26,10-11,10-16
Part Fixturing		Probe Compensation	
See "Fixtures"		See "Tip Compensation"	
Passthrough Mode	9-5,0-6	Probe Holder	10-17
PC-DMIS	9-5,9-6	Probe Offsets	5-18
Perpendicular Angles Option	10-11	Probe Qualification	2-8
Plane		Probe Status	5-6
See "Measuring A..."		Probe Removal	
Playback	5-27,28,29,30,31,32	See "Remove Probe"	
Creating an Inspection	5-28	Probe Qualification Results	2-12

# Index

Probe Techniques		Select Probe Type	5-18
See "Effective Probe Techniques"		Select Axis	6-3,8-4
Probes	A4-2	Self Diagnostics	2-4
Probes Softkey	5-19	Send out Serial	10-12
Projection Point	5-23	Send to Printer	5-10,4-3
Projections	1-15,1-16	Serial	
Qualification Sphere	2-8,2-11,A9-1	See "Serial Output"	
Qual Sphere Diameter	2-12,10-10	also "Connecting to a computer"	
Qualification Results		Serial Cable	
See "Probe Qualification Results"		See "Null Modem Cable"	
Qualify additional tip softkey	5-19	Serial Number	
Rate Error	11-5	See "Machine Serial Number"	
Rotation	5-20,4-5,1-10	Serial Output	
Recall Datum	5-20,6-3	Digitize Mode	9-4
Recall Program	5-31	Measurement Results	10-12,5-7
Recall Tip softkey	5-19	Toleranced (Print Format)	5-15
Reclamation (Card)	5-31	Service Utilities	2-7,5-35
RefleX Demo Block		Set Axes	5-11,4-3
See "Demo Block"		Set Level	5-10,4-3
Reference Feature	5-34	Set Origin	5-12,4-3
Reference Length	10-9	Shanking	1-19
Reference Plane	5-7	Single Feature Display softkey	5-8
RefleX Scan	A5-1,A4-1	Skull & Crossbones icon	
Relationship Mode Softkey	5-8	See "Frown Face Icon"	
Relationships (Any 2 features)	5-24	Smart Cards	2-3,2-4,5-30,5-32A8-1
Replacing Measured Blocks	5-33	Hot Swapping	2-6,2-4
Remeasure Tip softkey	5-19	Softkeys	3-7,A2
Removing a probe	2-9	Software Card	2-3,2-4,2-6,A8-1
Reorienting a probe	5-3	Software Version	2-3
Replacement Controller		Speaker	
See "Installing a .... "		See "Volume (Speaker)"	
Reset Measurement Mode	4-3	Sphere	10-5
Result Screens/Windows	3-8,5-5,A1	See "Measuring A..."	
Run Chart (Statistics)	5-25	Squareness Limit	10-10
Runout	6-3	Standard Probe Holder	
Saving Datums	4-4,5-20	See "Probe Holder"	
Save Startup Probe		Startup Probe	2-8,2-12,5-19,10-6
See "Startup Probe"		Startup Tutorial	2-1
Saving a program		Statistics	5-25
See "Store Program"		Status Bar	5-6,5-7,5-3,5-4
Scanning Screen	5-4	Stop Bits (Serial)	10-16
Screen Counter	5-7	Storage Cards	2-3,2-4,2-6,10-3,A4-1,A7-1
Scribe Mode	7-4,10-17	Store Feature Softkey	
Scale Up/Down	6-3	See "Store Relationship"	
Scroll Up/Down softkey	2-5,5-8	Store Program	5-30

Store Relationship	5-13	Word Length (Serial)	10-16
Straightness	6-4	Work Instructions	5-35
Summary Data (Statistics)	5-25	XON/XOFF (Serial)	10-17
Support Web Site		XYZ Air Locks	2-7
See "Web Site Address"		XYZ Machine Axes	
Switch Box Kit	A4-1	See "Machine Axes"	
Symbols		XYZ Counter Mode	
See "GD&T Symbols"		See "Counter Mode"	
Symmetry Line	5-23	XYZ Plot	
Symmetry Plane	5-23	See "Lissajous Plot"	
Symmetry Point	5-22	Y2K Compliance	10-14
System Modes	2-14, 2-13	ZMouse	
System Options	2-7,10-1..18	See "Mouse"	
System Startup	2-1		
System Startup Button	2-13,6-4		
Tip Compensation	1-17		
Tips - Number allowed	2-12,5-6		
Tolerance softkey	5-8		
Tolerancing ISO			
See "ISO Tolerancing"			
Tolerancing Results	5-14,5-15		
Tools Menu softkey	5-8		
Tools Menu			
See specific tool			
Touch Trigger Probe	1-18,1-19,1-20,2-9,5-3		
Troubleshooting	11-3		
TTP			
See "Touch Trigger Probe"			
TTL Controller	10-4		
TTP Preview Screen	5-3		
Trailing Places			
Translation	5-20,4-5,1-9		
Units (Inches/mm)	10-5		
Universal Probe Holder			
See "Probe Holder"			
Upper Menu	5-8,3-8,3-9		
Velocity Speedometer			
See "Speedometer"			
Volcomp	1-13,1-14,2-6,9-5		
Volcomp Mismatch	11-6..8,A7-1,A8-1		
Volume (Speaker)	10-5		
Volumetric Compensation			
See "Volcomp"			
Vorne Display	10-17, A4-1		
Web Site Address	2-4		

