

Contents

Introduction to Coordinate Metrology	1-1
Understanding the CMM	1-3
The Machine Coordinate System	1-5
The Part Coordinate System	1-6
Alignments	1-7
Datums	1-8
Translations	1-9
Rotations	1-10
Measured and Constructed Features	1-11
Constructed Features	1-12
Volumetric Compensation	1-13
Projections	1-15
Tip Compensation	1-17
Effective Probe Techniques	1-18
Startup Tutorial	2-1
Working with Smart Cards	2-3
Loading the Software	2-4
The Language Screen	2-5
The Volcomp Screen	2-6
The Home Screen	2-7
Probe Qualification: Select probe	2-8
Probe Qualification: Locating a Sphere	2-9
Probe Qualification: Insert probe	2-10
Probe Qualification: Measuring a Sphere	2-11
Probe Qualification: The Results	2-12
The Startup Options Screen	2-13
Measuring Features Tutorial	3-1
Introduction to the Measurement Mode	3-3
Measuring a Point	3-4
Point Result Windows	3-8
Point Results - Printing	3-9
Measuring a Line	3-10
Measuring a Circle	3-12
Measuring a Plane	3-15
Measuring a Cylinder	3-17
Measuring a Cone	3-19
Measuring a Sphere	3-21
Alignments Tutorial	4-1
Alignment 1: Line Line Intersect	4-3
Alignment 2: Circle Circle Centerline	4-4
Translating and Rotating an alignment	4-5

Contents

The Measurement Mode	5-1
TTP Preview Screen	5-3
Hard Probe Scanning Screen	5-4
Measurement Results Screen	5-5
The Status Bar	5-6
Measurement Mode Softkeys	5-8
Change Feature Type	5-9
Set Level	5-10
Set Axis	5-11
Set Origin	5-12
Delete Last Block	5-13
Tolerancing Results	5-14
GD&T Symbols	5-16
The Tools Menu	5-17
Tools Menu - Probes	5-18
Tools Menu - Datums	5-20
Tools Menu - Constructions	5-21
Tools Menu - Relationships	5-24
Tools Menu - Statistics	5-25
Tools Menu - Part Drawing	5-26
Tools Menu - Playback Mode	5-27
Tools Menu - Reference Feature, Headers, Service Utils.	5-33
Dial Indicator Mode	6-1
The Dial Indicator Mode	6-3
Checking Straightness and Flatness	6-4
Counter/Scribe Mode	7-1
XYZ Counter Mode	7-3
Scribe Mode	7-4
Height Gauge Mode	8-1
Height Gauge Mode	8-3
Measuring in Height Gauge Mode	8-4
Height Gauge Mode Results Screen	8-6
Height Gauge Mode Softkeys	8-9
Height Gauge Mode Tolerancing	8-10
Digitize Mode	9-1
Options in the Digitize Mode	9-3
Available Softkeys	9-4

Contents

System Options	10-1
Introduction to System Options	10-3
Language and Machine Type	10-4
Language Screen, Speaker Volume, Units	10-5
Trailing Places, Angles, Delimiters, Startup Probe	10-6
Air Saver and Contrast	10-7
Points / Second, Minimum Distance	10-8
Nearest Nom., Reference Length, Min. Cyl. Depth	10-9
Qual. Sphere Dia., Squareness Limit, Cone Angles	10-10
Perpendicular Angles, Send to Printer	10-11
Send out Serial	10-12
Playback Pause, Print Company, Print Operator	10-13
Print Part Name, Print Date, Print Time	10-14
Print Note, and Require Points	10-15
Mouse, Printer Format, Baud Rate, Word Length, Parity	10-16
Stop Bits, Probe Holder, TTP Type, Vorne Display, Dial Indicator	10-17
XYZ Counters, Height Gage, Digitize, Measurements	10-18
DCC Playback, Prehit Distance, Posthit Distance	10-19
Alignments, Clearance Speed, Pre/Posthit Speed, Max Acc. ..	10-20
Frequently Asked Questions / Troubleshooting	11-1
Frequently Asked Questions	11-3
Frown Face Errors	11-4
Rate Errors	11-5
RefleX's Volcomp Files	11-6
DCC	12-1
Introduction to DCC, Jogbox	12-3
Startup, Measuring Features	12-4
Clearance Points	12-5
Typical Fixture Application, Demo Mode	12-6
Appendix	A1-1
Measurement Results	A1-1
System Softkeys	A2-1
Demo Block Print	A3-1
Optional Hardware	A4-1
RefleX Scan	A5-1
Connecting RefleX to a Host Computer	A6-1
Installing a Replacement Controller	A7-1
Installing a Software Card	A8-1
Accuracy Troubleshooting	A9-1